

(1) [A]

(2) [↑]



Bluetooth padlock instructions 4400/4401



Quickstart - Unlock with mobile device


1. Remove lock and instructions from package.
2. On mobile device, visit app store and download free Master Lock Vault eLocks app.
3. Follow prompts to log into, or create, a Master lock Vault account.
4. In Master Lock Vault eLocks app, touch Add a Lock (+).
5. Enter **ACTIVATION CODE (1)** shown above to register lock and follow instructions to connect mobile device to lock.
6. Your lock is in Touch Unlock mode. Touch any button on lock keypad to wake and unlock it. Do not pull on the shackle. When lock lights green, open within 5 seconds or it will relock. You can calibrate the phone-to-lock communication range in the app settings.

Quickstart - Unlock with lock keypad

1. Remove lock and instructions from package.
2. Enter **PRIMARY CODE (2)** shown above by pressing the corresponding directions on lock keypad. Do not pull on the shackle when entering code.
3. When lock lights green, open within 5 seconds or it will relock.

How to replace battery - 4400/PN nr. 834800021

Lock will light yellow to indicate a low battery. Unlock and open the lock. Pull out battery drawer and remove old battery. Install a new CR2450 battery with positive (+) side facing the back of the lock. Close battery drawer.

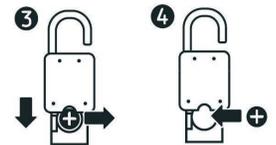


How to unlock with external battery - 4400/PN nr. 834800021

If battery dies in locked position, pull battery drawer out part way to expose jump contact point. Do not force the drawer open any further. Hold a new CR2450 battery in the slot with positive (+) side of battery facing the front of the lock. While holding the battery in place with authorized mobile device within range of lock, press any keypad button on the lock (if in touch Unlock mode). If lock does not unlock, enter Primary Code on lock keypad. When unlocked, pull out battery drawer and install new CR2450 battery.




How to replace battery - model 4401/PN nr. 834900021

Lock will light yellow to indicate a low battery. Unlock and open the lock. Remove bottom cover. Use a coin to turn battery door slot 90 degrees counter clockwise (A). Open battery door and remove old battery. Install a new CR2 battery with positive (+) side facing right. Close battery door, turn slot back 90 degrees clockwise and replace bottom cover.

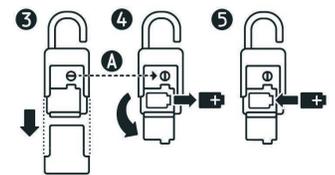

How to unlock with external battery - 4401/PN nr. 834900021

If the battery dies in locked position, remove bottom cover. Hold a 9 V battery to jump contacts on bottom of lock. While holding the battery in place, with authorized mobile device within range of lock, press any keypad button on the lock (if in Touch Unlock mode). If lock does not unlock, enter Primary Code on lock keypad. When unlocked, open battery door and install a new CR2 battery.

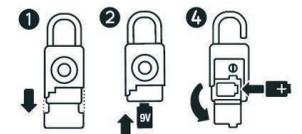

Led keypad indicators

- Locked, Communicating, or Keypad entry.
- Open or unlocked and waiting to be opened.
- Low battery.
- Invalid keypad entry

Important information

Please note that after installing a new battery, the low battery icon will no longer display in the app, after the app and the lock communicate with each other. However, it will take between 2 to 24 hours for the yellow LED to stop displaying on the lock itself.